 


Classic 2.4G Controller-M

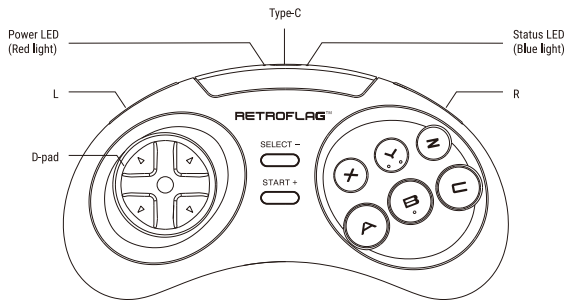

Switch / Windows / MD mini / MD mini 2

1. Connect the 2.4g receiver to your device.
2. Press Start to turn on the controller.
3. Wait until your device recognizes the controller to play.

Buttons	A	B	C	X	Y	Z	L	R	SELECT	START
Switch	A	B	R	X	Y	L	ZL	ZR	-	+
Windows	A	B	RT	X	Y	RB	LB	LT	View	Menu
MD mini / mini 2	A	B	C	X	Y	Z	Z	C	Mode	Start

* Switch / Windows: Press & hold SELECT+START= HOME

Remap D-pad

Left + Select : set D-pad as left analogue stick.
 Right + Select : set D-pad as right analogue stick.
 Up + Select : reset D-pad.

- * Available for Windows only.
- * Press and hold any of the button combinations above for 5 seconds to remap the D-pad.
- * LED will blink in blue to indicate the success of D-pad remapping.
- * You need to reset the D-pad manually.

Turbo

1. Hold **L+SELECT** first, then press the button you would like to set turbo functionality to.
2. Auto-Turbo: Hold **L+SELECT** first, then double press the A/B/C/X/Y/Z button;

- * Pause/Restart Auto-Turbo function via press the button you set.
- * Supported buttons: A、B、C、X、Y、Z
- * The turbo function will not be saved after you restart the controller.

Button Swapping

Hold any of two buttons you would like to swap, then press and hold **L+R+SELECT** to complete the button swapping.

- * Supported buttons: A、B、C、X、Y、Z
- * The button swapping function will not be saved after you restart the controller.

Battery & Status LED

Battery capacity: 480mAh
 Charging time: Approx. 1~2 hours
 Battery life: Approx. 40 hours

Power Status LED

Red LED flashing – Low battery
 Red LED solid – Charging
 Red LED light out – Fully charged

Controller/Receiver working status LED


Blue LED slowly flashing – Reconnecting
 Blue LED rapidly flashing – Pairing
 Blue LED solid – Connected

Pair with the 2.4g receiver

If the controller loses the connection with the receiver, please shorten the distance between them, hold the SELECT button of the controller for 5 seconds after turn on the controller till the Blue status LED rapidly flashing to reconnect.



 Classic 2.4G Controller-M

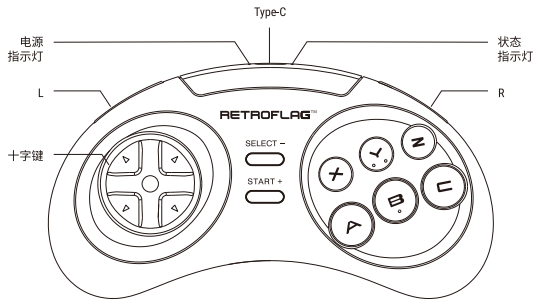

Switch / Windows / MD mini / MD mini 2

1. 把接收器连接到设备。
2. 按 START 键开启手柄。
3. 完成后即可使用。

设备 / 键位	A	B	C	X	Y	Z	L	R	SELECT	START
Switch	A	B	R	X	Y	L	ZL	ZR	-	+
Windows	A	B	RT	X	Y	RB	LB	LT	View	Menu
MD mini / mini 2	A	B	C	X	Y	Z	Z	C	Mode	Start

* Switch / Windows 可使用 SELECT+START 键作为 HOME 键。

切换方向键

按住 LEFT+SELECT 键 5 秒可将方向键切换为左摇杆输出。
按住 RIGHT+SELECT 键 5 秒可将方向键切换为右摇杆输出。
按住 UP+SELECT 键 5 秒可将方向键切换为方向键输出。

- * 仅在连接 Windows 时可用。
- * 切换成功时蓝色状态指示灯闪烁。
- * 切换后会保存。

连发

1. 按住 L+SELECT 键,再按下需要设置连发的按键即可开启连发。
2. 按住 L+SELECT 键,再按下两次需要设置自动连发的按键即可开启自动连发。

- * 支持连发的按键:A、B、C、X、Y、Z。
- * 连发功能不会保存,手柄关机后恢复。

按键交换

按住任意两个需要交换的按键,再按下 L+R+SELECT 键完成交换。

- * 支持交换的按键:A、B、C、X、Y、Z。
- * 交换功能不会保存,手柄关机后恢复。

电源和指示灯

电池容量:480mAh
充电时间:约 1-2 小时
续航时间:约 40 小时

手柄电源指示灯:

红灯闪烁 - 电量不足
红灯常亮 - 正在充电
红灯熄灭 - 充电完成

手柄 / 接收器状态指示灯:

蓝灯慢闪 - 正在回连
蓝灯快闪 - 正在配网
蓝灯常亮 - 已连接

配对接收器

若手柄与接收器丢失配对,可在手柄开机后按住 SELECT 键 5 秒到状态指示灯快闪并靠近接收器以重新配对。

