


Handheld Controller for Switch

Instruction Manual

Switch

Switch OLED model

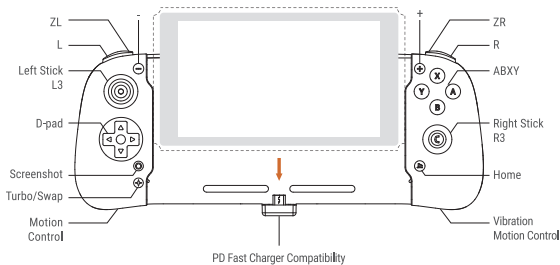

HD rumble, IR camera, NFC scanning, and wake up
Switch console are not supported.

Turbo and Swap Buttons

Supported buttons: A, B, X, Y, L, R, ZL, ZR, L3, R3

Turbo

Press and hold TURBO button, then press the button you would like to set Turbo. The controller vibrates when Turbo is activated.

Auto-Turbo

Press and hold TURBO button, then double press the button you would like to set Auto-Turbo, Pause/Restart Auto-Turbo function via press the button you set. The controller vibrates twice when Auto-Turbo is activated.

Swap buttons

Press and hold the two buttons you would like to swap, then press TURBO button. The controller vibrates when Button Swap is successful.

Deactivate Turbo / Auto-Turbo / Swap functions

Press and hold TURBO button, then press the activated button.
The controller vibrates when the cancellation is successful.

* Can't set Turbo and Swap functions on one button at the same time.

* Switch needs to be 3.0.0 or above. Go to System Setting – Controller and Sensors – turn on Pro Controller Wired Communication.

* The USB port can charge only when the Switch console is connected.